











What to do if...
What to do if...

	A tire punctures	P. 720	If you have a flat tire
	The engine does not start	P. 728	If the engine will not start
		P. 113	Engine immobilizer system
		P. 736	If the battery is discharged
	The shift lever cannot be moved out	P. 730	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 739	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 35	If you lose your keys
	The battery runs out	P. 736	If the battery is discharged
	The doors cannot be locked	P. 53	Doors
	The horn begins to sound	P. 115	Alarm
	The vehicle is stuck in mud or sand	P. 742	If the vehicle becomes stuck

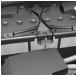

A warning light or indicator light comes on

P. 707

If a warning light turns on or a warning buzzer sounds...



■ Warning lights



Brake system warning light



P. 707



Malfunction indicator lamp



P. 708



"ABS" warning light



P. 708



Driver's seat belt reminder light

P. 710



Front passenger's seat belt reminder light

P. 710



Brake system warning light

P. 708



Master warning light with warning message

P. 710



Low fuel level warning light

P. 710



Electric power steering system warning light

P. 708



SRS warning light

P. 708



Slip indicator

P. 708



Open door warning light

P. 710



Tire pressure warning light

P. 710



Charging system warning light

P. 707

PCS

Pre-collision system warning light*

P. 708

CRUISE

Cruise control indicator*

P. 708

**AFS
OFF**

"AFS OFF" indicator*

P. 708



Automatic High Beam indicator light*

P. 708

*: The light flashes to indicate a malfunction.